

## How to Install Fasade Outlet Cover Laminates



1. Using a utility or Exacto® knife, cut a rectangle around outlet cover leaving an extra 1/2" around the cover.




5. Fold edges over cover.




2. Peel off backing and lay laminate face down on your work surface.




6. Cut away switch hole and screw holes with a utility knife or hobby knife.

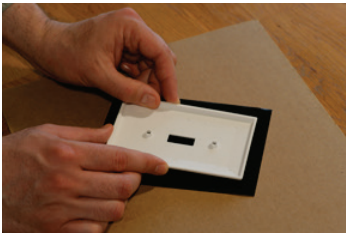

3. Place the outlet cover face down in the center of the laminate.

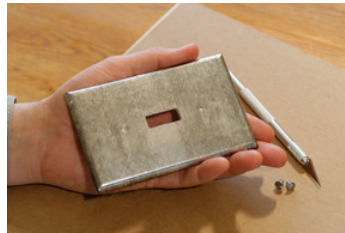

7. Your matching outlet cover is now ready to be installed.

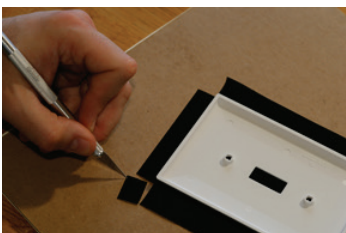

4. Cut away small squares at each corner to allow fold.